

## OVERVIEW

The ZONE-LO provides access to a line-level audio output signal, 2Vpp. You can access the signal via a front panel RCA connector.

## INSTALLATION

The device can mount to a wall using the four keyhole features located at the corners of the device, with wall anchors appropriate to the installation surface. Power the device with PoE or PoE+, connected via an Ethernet cable to the PoE input. When applying power, the green Power LED on the front panel will illuminate.



## SETUP AND USE

**WARNING: Make sure to turn off equipment when making connections, and to initially set audio equipment volume to a low value before powering on to avoid any audio “pop” in the output.**

After connecting the ZONE-LO to the audio destination via the RCA connection, power on both the ZONE-LO and the external audio equipment. Increase the volume control of the audio destination to 75% of the max volume. Configure the ZONE-LO volume as follows:

- If using the web page interface, select **Device Settings** → **Audio**. Set the *Speaker Volume* to 8.0, click the *Save Changes* button, then reboot the ZONE-LO using the *Reboot now* link.

Audio Settings <a href="#">help</a>		
Parameter	Stored value	New Value
Speaker Volume	10	8
Feedback Suppression	Ultralow6	Ultralow6

- If using a configuration file, update the *volume* parameter in the *SIPConfig* tag as shown below, save the file, then reboot the ZONE-LO.

```
<SIPConfig  
  volume="8.0"  
>
```

Send audio to the ZONE-LO over the network, and verify the audio broadcasts at reasonable levels at the destination output. Adjust the volume settings accordingly. *Available volume range: 0.0 - 13.0.*