

Optional braille placard shown. Contact ANetD Sales (sales@anetd.com) for more information.


INSTALLATION

- 1) Carefully separate front baffle from back box and use back box to mark installation location. Holes on front sides will align as shown when in correct vertical orientation.



- 2) Run network cable (CAT5 or better) to installation location and into cable access port, terminate end, leaving 6" slack inside box. If concerned with line performance, see AND Tech Support at tech@anetd.com for a ferrite. Wrap last 20" of cable around ferrite twice and clamp shut. Allow ferrite to sit outside of device.
- 3) Ground box per local building codes using green ground screw in back box where required.
- 4) Secure back box using mounting hardware appropriate for installation surface:

- Drywall: #8-32 steel screw x 1-5/8" min. length fastened to a 75 lbs. rated drywall anchor, or similar
- Concrete: #8-32 steel screw x 5/8" min. length fastened to an 8-32 concrete anchor with 9/16" min. length, or similar

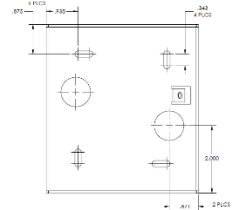

- 5) Connect network cable to PoE/PoE+ labeled jack on ANetD module in front baffle. Make sure network connector snaps into metal connector receptacle on module, such that it won't disconnect when gently pulled.

- 6) Insert front baffle at an angle to the right side first to ensure cables clear back box. Baffle will align itself to back box via two side posts.



- 7) Secure front baffle to back box using 4 security screws and pin-in-Torx driver bit, included.
- 8) Connect other end of network cable to an LPS (Limited Power Source) PoE (Power over Ethernet) network switch or PoE injector on a network with a DHCP server.

Advanced Network Devices • 3820 Ventura Dr. Arlington Heights, IL 60004

tech@anetd.com • 847-463-2237 • www.anetd.com/

ACCESS THE DEVICE

Use one of these ways to access the device:

- Enter the IP address assigned by the DHCP server in your browser.
- Enter the IPv6 link-local address in a browser formatted as **`http://[fe80::2246:f9ff:feXX:XXXX]`** (XX:XXXX = last 6 digits of MAC address).
- Double-click on the device in the ClockWise Endpoints list to open the web server interface.
- For third-party software applications, consult guide for method (often uses configuration file).

OPERATION

The button LED lights red during microphone activation.

CONFIGURATION OPTIONS

The device ships with these default settings:

Push-to-Talk 1 Trigger Only "Yes"

Configuration File Setup

SIPConfig tag:

```
<SIPConfig  
  push_to_talk_ip1_trigger_mode="1" />
```

REGISTERED SIP CALL

Register the IP Call Box device to an SIP server to call an SIP phone or ring a group.

Configuration File Parameters

SIPConfig tag (values included for example):

```
<SIPConfig  
  push_to_talk_ip1="301" />
```

Web Server Settings

- Go to **Device Settings** → **SIP**.
- Under **SIP GPIO Input Action Settings**, set **Push-to-Talk 1** to the SIP extension the device should call.
- Select **Save and Apply** to save changes.

DIRECT SIP CALL

Call a SIP phone directly without registration to a SIP server.

Configuration File Parameters

SIPConfig tag (values included for example):

```
<SIPConfig  
  push_to_talk_ip1="sip:301@10.10.7.168"  
>/>
```

Web Server Settings

- Go to **Device Settings** → **SIP**.
- Under **SIP GPIO Input Action Settings**, set **Push-to-Talk 1** to the SIP extension the device should call.
- Select **Save and Apply** to save changes.

PUSH AND HOLD SIP CALL

In addition to the Push-to-Talk call, configure a second action (registered or direct SIP call) to dial a different SIP extension when holding the button for a specified time or longer.

Configuration File Parameters

SIPConfig tag (values included for example):

```
<SIPConfig  
  push_to_talk_ip1_alt="301"  
  push_to_talk_ip1_alt_ms="2000"  
>/>
```

Web Server Settings

- Go to **Device Settings** → **SIP**.
- Under **SIP GPIO Input Action Settings**, set **Push-to-Talk 1 Alternate** to the SIP extension the device should call when held for the desired duration.
- Set **Push-to-Talk 1 Alternate Hold Time** to the desired duration (in milliseconds) to hold the button to trigger the call.
- Select **Save and Apply** to save changes.

RESOURCES

SIP Configuration:

<https://www.ipspeaker.com/support30/help/setting.html#sip>

User Support:

<https://www.anetd.com/user-support/>

AND Limited Warranty:

<https://www.anetd.com/warranty/>

Legal Disclaimer: <https://www.anetd.com/legal/>